



Website: www.leapers.com
Telephone: 734-542-1500
E-mail: office@leapers.com



USER MANUAL

For Model: TL-BPOB01-A

BIPOD INSTALLATION


 Ensure firearm is unloaded before installation and follow all basic rules of firearms safety.



1. Turn the tilt tension adjustment knob found on the QD mounting base counter-clockwise until it stops.



2. Press and hold down the QD mounting base's locking lever and remove the base from the rest of the bipod.

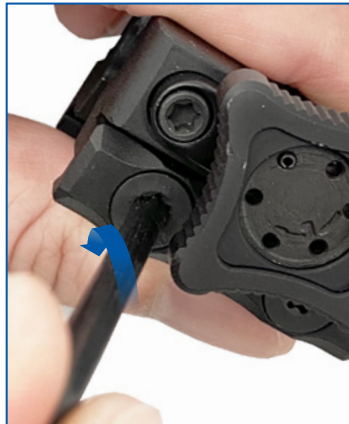

3. Loosen the QD mounting base's side locking plate by turning its screws counter-clockwise with the included tool.



4. Loosen the locking plate enough for the mounting interface to seat evenly onto your firearm's MIL-STD-1913 Picatinny rail with its squared recoil stops fitting into the rail slots.



5. The QD mounting base is designed to be placed as far forward on the rail as possible towards the muzzle either on the 12 or 6 O'clock rail depending on whether the user wants the bipod over or under the bore respectively.



6. Retighten the side locking plate by turning its screws clockwise until tightened. Recommended torque value is 35 in.lb.



7. Insert the bipod back into the QD mounting base, making sure the base's locking lever reengages.

22° PANNING



The bipod's panning tension is fixed and non-adjustable.

5 44° TILT TENSION ADJUSTMENT



1. Turning the tilt tension adjustment knob found on the QD mounting base clockwise increases tilt tension.



2. Turning the tilt tension adjustment knob counterclockwise decreases tilt tension and also allows the QD mounting base to be removed from the rest of the bipod when turned all the way.

3 POSITION BIDIRECTIONAL FOLDING



1. Push the posi-lock push button until you feel its locking lugs disengage, allowing you to turn the leg along its axis.



2. The locking lugs automatically lock at each of the three folding positions.


LEG EXTENSION HEIGHT ADJUSTMENT



1. To unlock the bipod leg extension for height adjustment, turn its locking thumb wheel counterclockwise until it stops.



2. Pull down the foot pad to increase the length of the leg extension. Note that the leg extension is under spring tension as it is designed to automatically retract. The leg extension is keyed and once at the desired length is secured in place by turning back the locking thumb wheel clockwise until it stops.

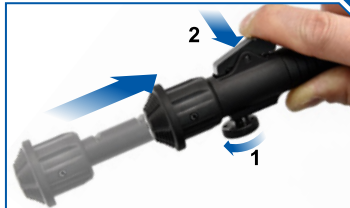

3. To automatically retract the leg extension, unlock the locking thumb wheel first and then press the release lever above it down.

The Best Never Rest Warranty - Lifetime

Leapers, Inc. warrants that all UTG & UTG PRO products conform to published specifications and are free from defects in material and workmanship. We will repair or replace defective products for the duration of the product's life span. Our dedicated and professional in-house customer service team will go above and beyond to make things right and provide the best in-class customer service experience you expect to receive.

Our warranty does not extend to products damaged from misuse, accidental damage, negligence, natural disasters/accidents, or unauthorized repair or alteration.

For warranty service, please submit your inquiry by visiting our customer service page on our website at www.leapers.com or give us a call at 734-542-1500. A Return Authorization Number (RMA) must be assigned before returning any products for warranty service.